
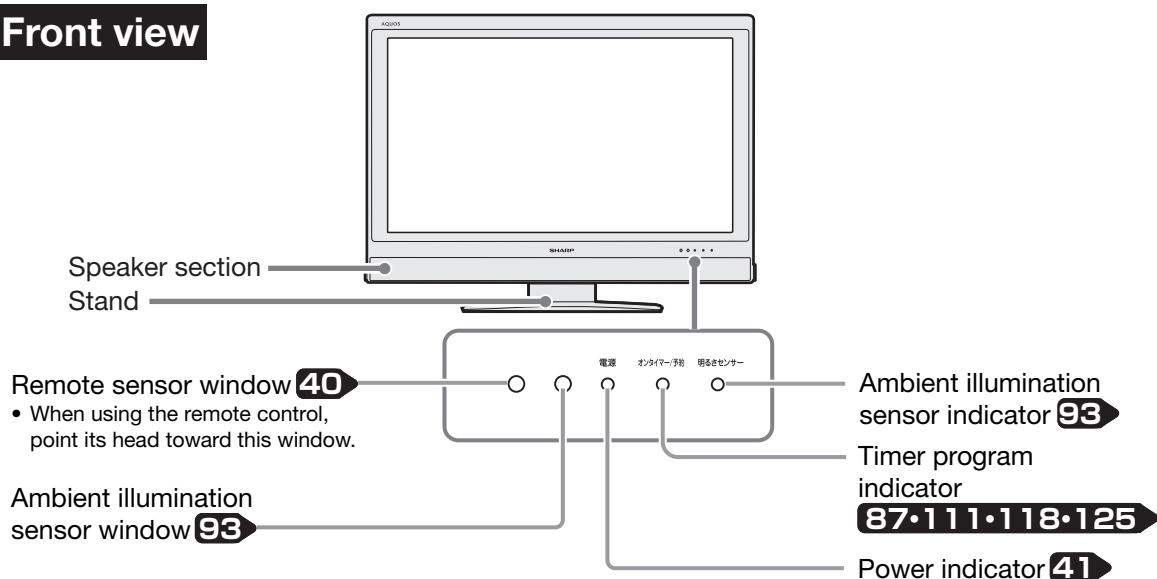


Part Names - Main Unit English Guide

- The number shown in each  is the page number where the part's function and/or use are explained in Japanese.


Front view




Adjusting the LCD panel angle

- The LCD panel can be rotated horizontally up to 20° clockwise and counter-clockwise.
- Hold the stand firmly when you adjust the monitor's angle.

Right Side view (LC-32DE5/LC-26D50)

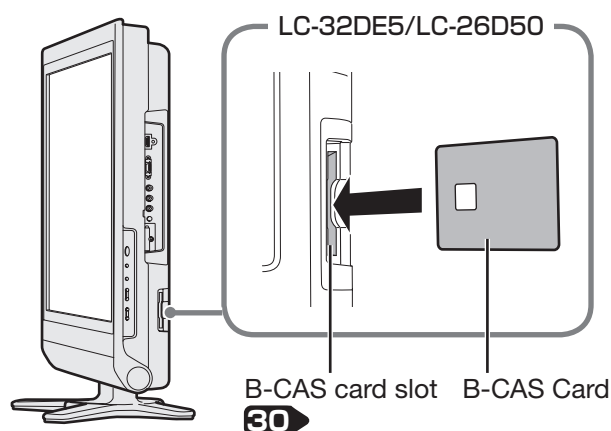


Left Side view (LC-20D50)

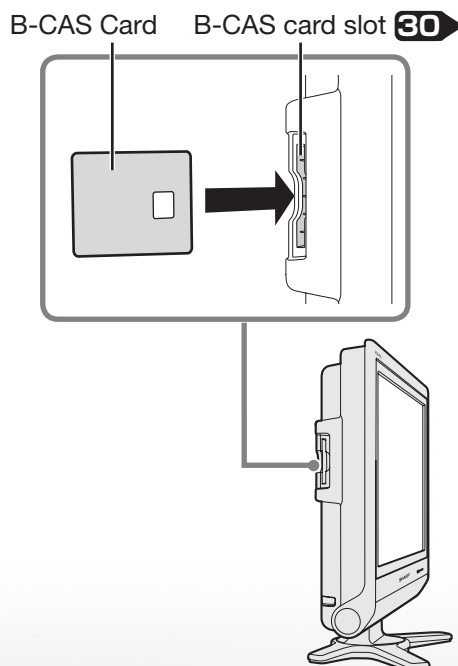



Back view

The illustrations below are those of LC-32DE5.
LC-26D50/LC-20D50 has the same layout of jacks and terminals as.

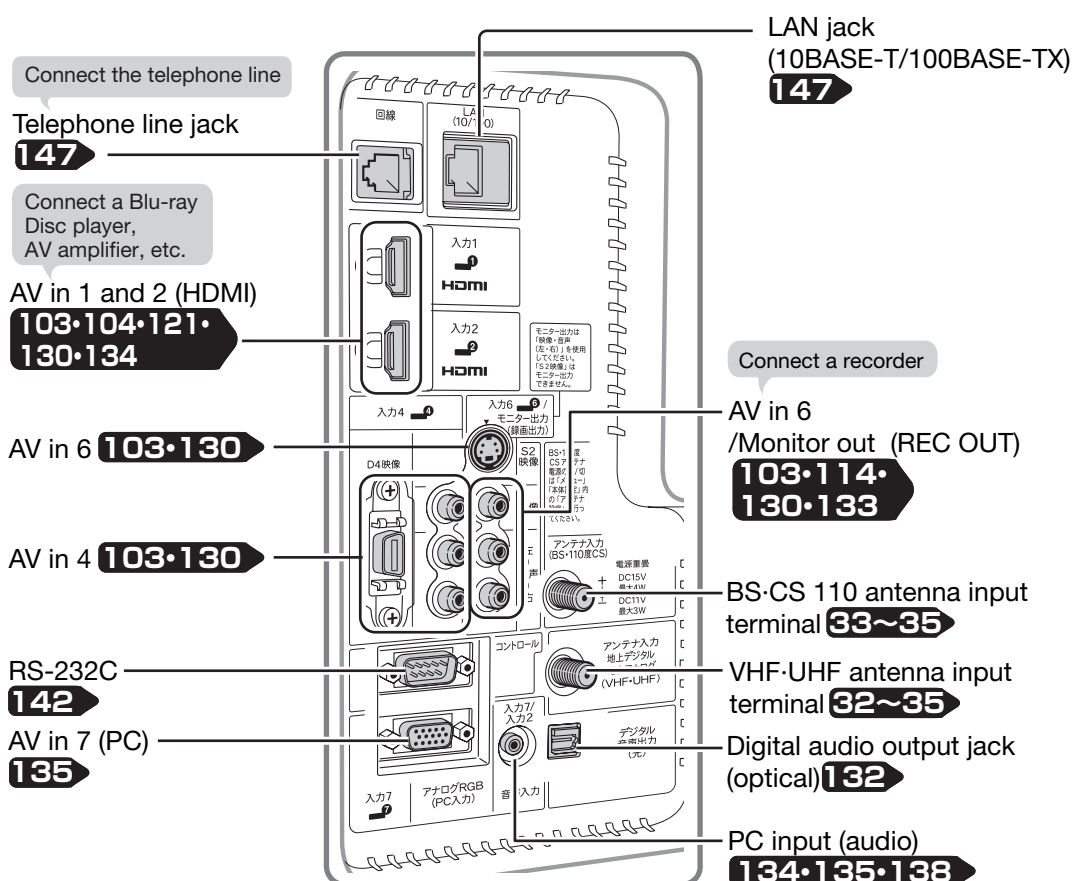

Control panel

Right side view

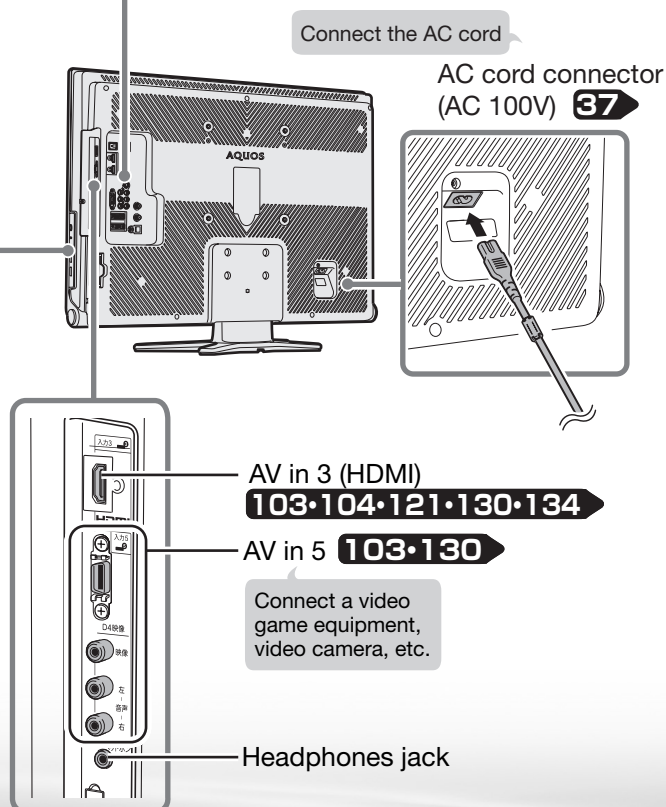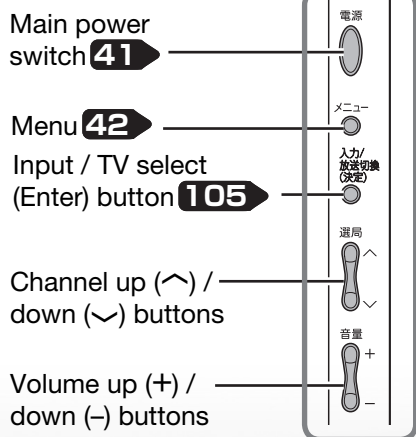

はじめに

準備

番組を見る

録画と再生

ファミリンク
で録画・再生

ゲームオーディオ
パソコンをつなぐ

その他の機能

故障かな仕様・
寸法図など

English
Guide

Part Names - Remote Control Unit

Active/Standby 41

Press to engage the TV set in the active or standby mode.

CATV 73

When selecting a CATV channel by entering the channel number, press this button first, then enter the 2-digit number with the TV channel select buttons (1-10/0).

Terrestrial digital select 68

BS select 68

CS select 68

Terrestrial analog select 68

Select the CS digital channel for the first time. 47

linked data broadcast 84

Press to call the data broadcast linked with the current digital TV program.

Volume up (+)/down (-) 69

Press to adjust the volume.

Mute 69

Press to temporarily turn off the sound. Press again to return the sound volume to the previous level.

Program info 85

Press to display detailed information on the current digital program.

EPG 76

Press to display or turn off the Electronic Program Guide (EPG: 番組表) when receiving a digital broadcast.

Other on-air programs 77

Press to display the EPG for currently on-air programs only (裏番組).

Finish 42

Press to finish menu operation, etc.

* This button can be conveniently used when you are at a loss during menu or EPG operation, etc.

Screen mode 89

Press to select the desired screen mode.

AV mode select 91

Press to select the picture/sound setting that best matches the current program.

Freeze 84

Press to freeze the picture.

Favorite channel select/register 73

Press to select a user-registered channel and to turn on/off the favorite channel register/registered channel table screen.

Familink 124 • 126~129

Press to operate "Familink" Recorders and AQUOS Surround connected via HDMI cables.

Display 70

Press to display or turn off the channel call, etc.

オフタイマー

Sleep timer 152

Press to select the desired remaining time period after which the TV set is automatically turned off and enters the standby mode.

3桁入力

Digital channel number input 72

Use to select a digital channel by entering the 3-digit channel number.

Familink 124 • 126

Press to operate "Familink" Recorders and AQUOS Surround connected via HDMI cables.

Channel select 69

- Press to select a channel.
- Use to input a number for various settings.

選局

Channel up (^)/down (v) 69

Press to select channels in the current network, media and CATV channels in the ascending or descending order.

* CATV channels are factory set to be skipped.

テレビ/データ

Media select 68

Press to select the desired media (TV or data).

入力切替

Input select 105

Press to select the desired input.

Menu 42

Press to display or turn off the menu screen.

The menus can be displayed in English. See 187 for instructions on how to switch the display language.

Cursor (up, down, left, right) 42

Use to select a menu item, column, etc.

決定

Enter/Confirm 42

Press to confirm a selected setting or menu item.

Return 42

Press to go back to the previous screen. Press this button instead of the Enter/Confirm (決定) button when you have selected the wrong item or input the wrong number, etc.

Color 78 • 79 • 84

Use to operate EPGs and data program screens.

映像切替

Picture select 83

Press to select the desired picture when watching a digital multi-picture program.

字幕

Caption 83

Press to display, select, or turn off captions when watching a digital program with captions.


音声切替

Audio select 82 • 83

Press to select the desired audio.

To open the cover


Hold the cover by the projections on both sides and lift upwards.

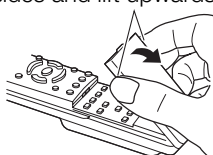

Switching the Display Language to English メニューなどの言語を英語にする

- Using the menu screen, you can switch the on-screen display language to English.

メニューなどの画面表示を英語にすることができます。

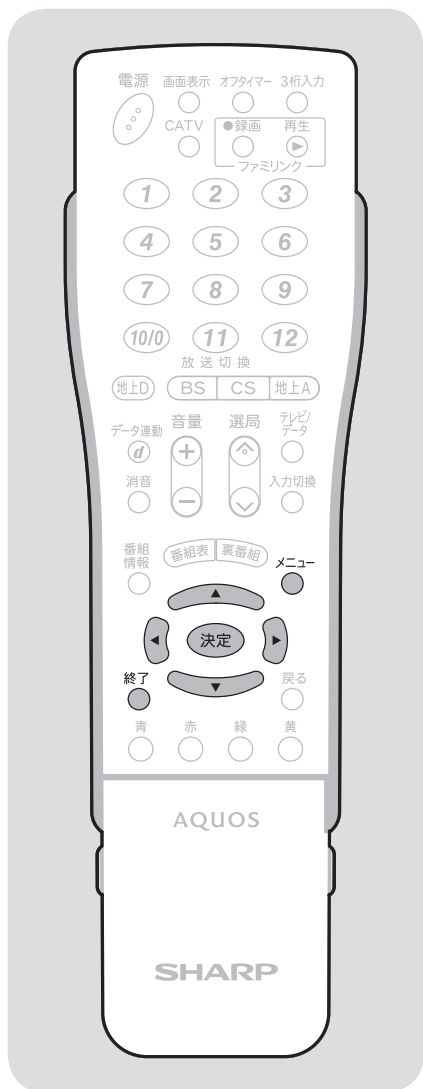

お知らせ

誤ってメニューを英語にしてしまったときは

- ・メニューから「Setup」－「言語設定 (Language)」を選んで決定し、「日本語」を選んで決定すると日本語になります。

1

Display the menu screen.
メニューを表示する


Press
メニュー

2

Select “本体設定” (Setup) –
“Language (言語設定)” .
「本体設定」－「Language (言語設定)」
を選ぶ
Enter.
決定する

Select with

Press
決定

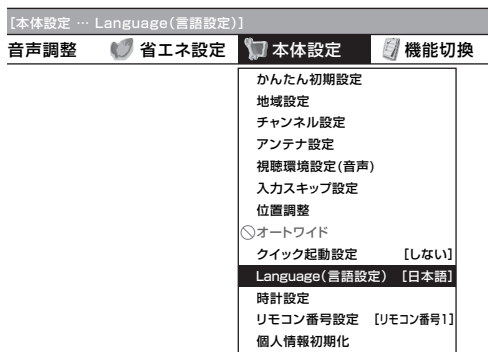


3

Select “English” .
「English」を選ぶ
Enter.
決定する

Select with

Press
決定

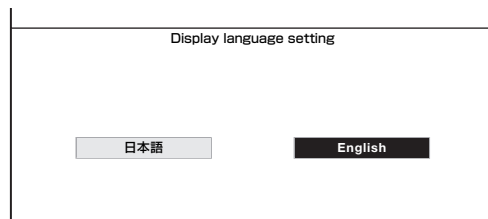

- ・ The menu screen is now displayed in English.
- ・ 画面表示が英語になります。

4

Finish this operation.
終了する

Press
終了

はじめに

準備

番組を見る

録画と再生

ファミリーリンク
で録画・再生

ゲームオーディオ
パソコンをつなぐ

その他の機能

故障かな仕様・
寸法図など

English
Guide